
0 optional Installation Options


Network or Yale Accentra Key Module

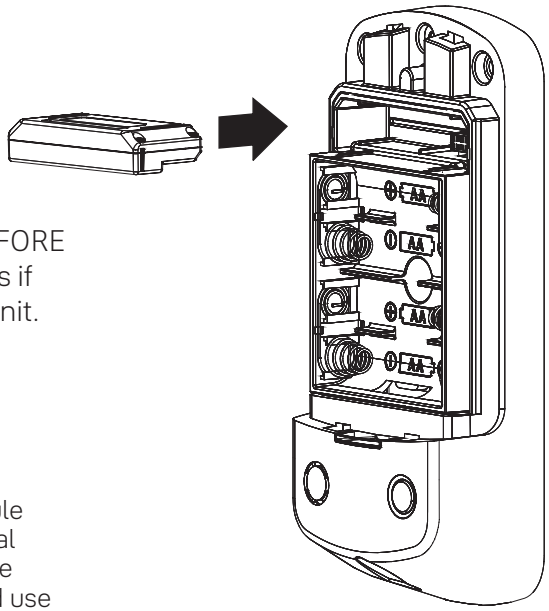


Module must be installed BEFORE batteries. Remove batteries if adding module to existing unit.

The Yale Accentra Key module enables access with physical (cards and fobs) and mobile credentials ONLY. Creation and use of User PIN codes are disabled.

Programming Instructions

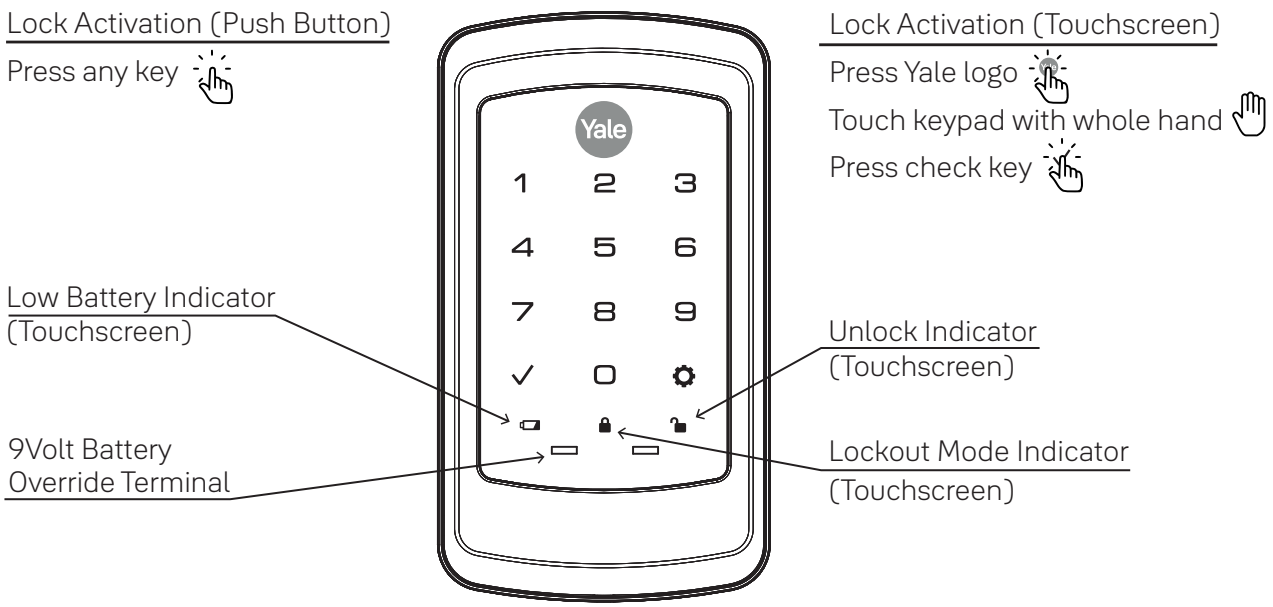


Keypad

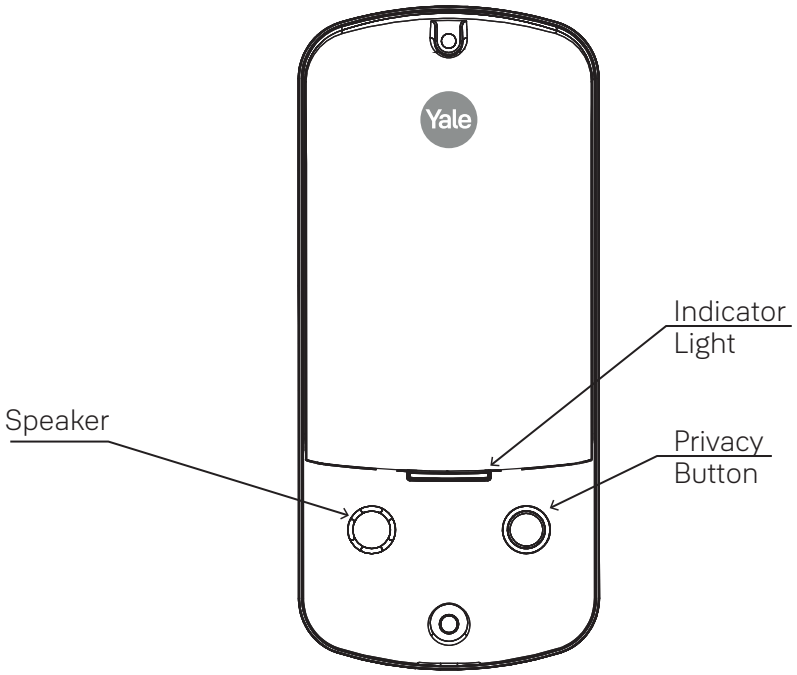

Inside Lock

1 Creating Master PIN Code


Creating a Master PIN Code must be performed upon installation or after resetting the lock to factory default. Programming and use of lock is not possible until this step has been successfully completed.

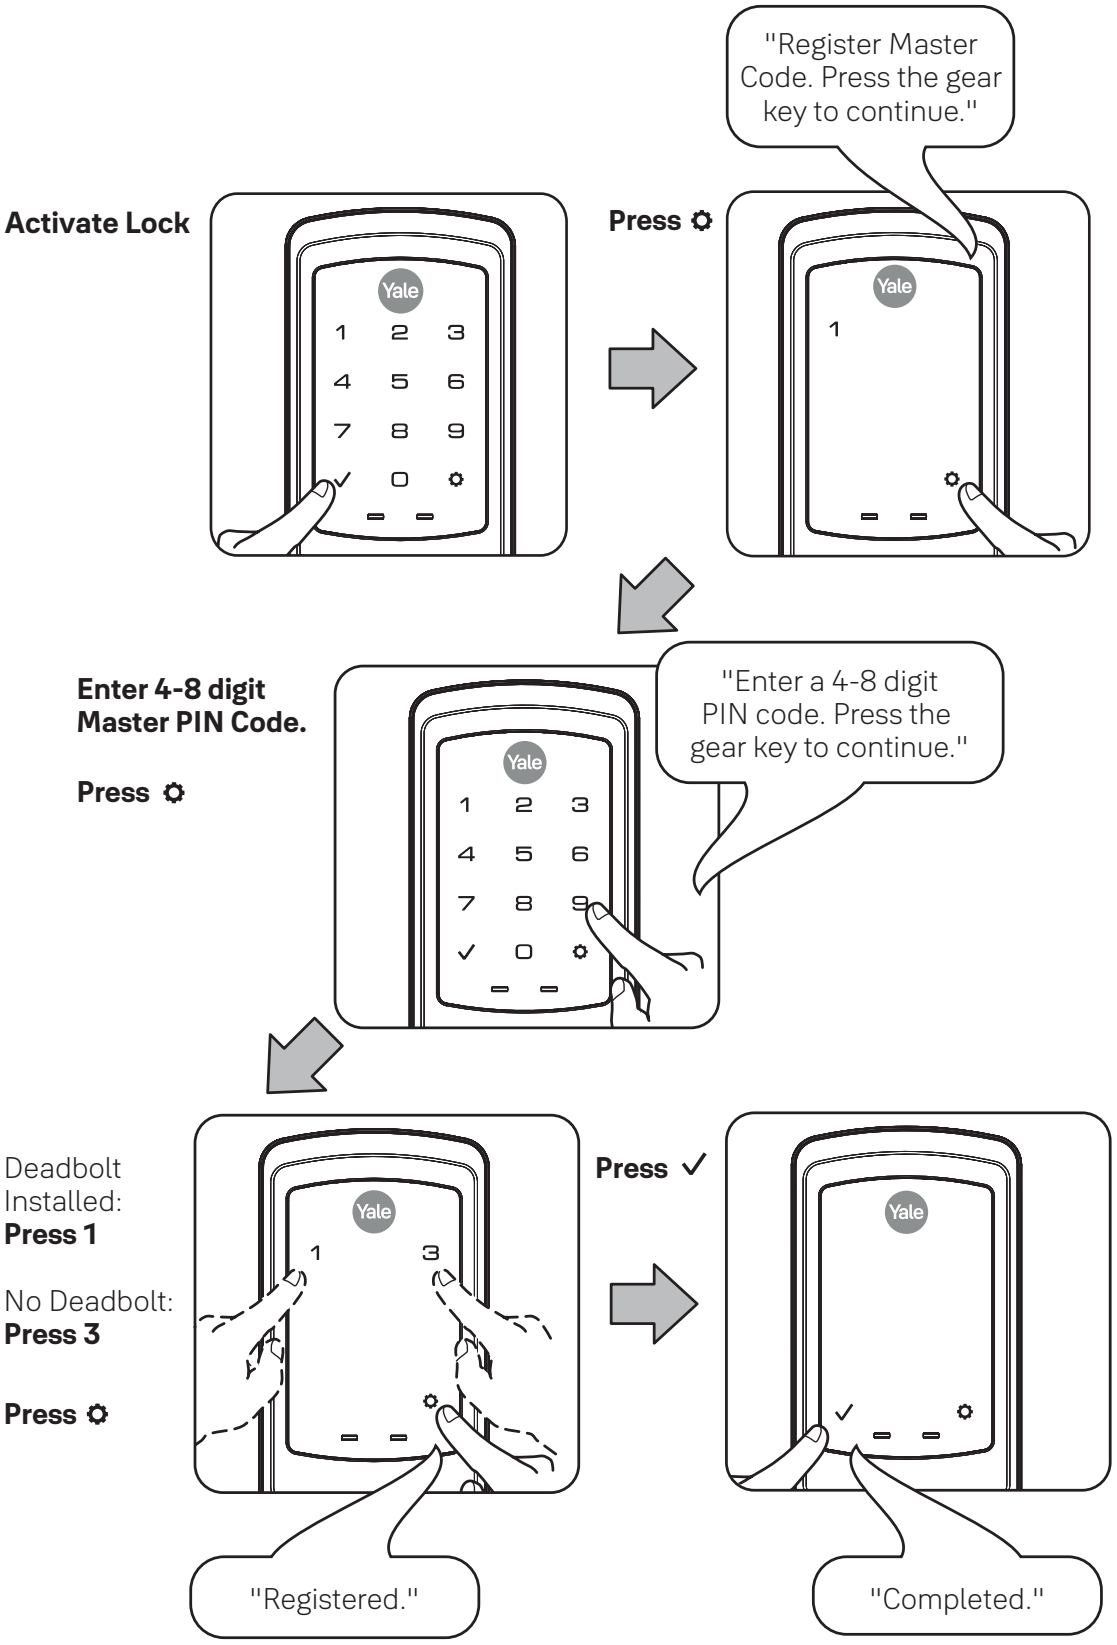

2a Creating User PIN Codes


Master PIN code must be created first.
*Max User Codes = 100 without Network Module / 500 with Network Module

The Yale Accentra Key module enables access with physical (cards and fobs) and mobile credentials ONLY. Creation and use of User PIN codes are disabled.

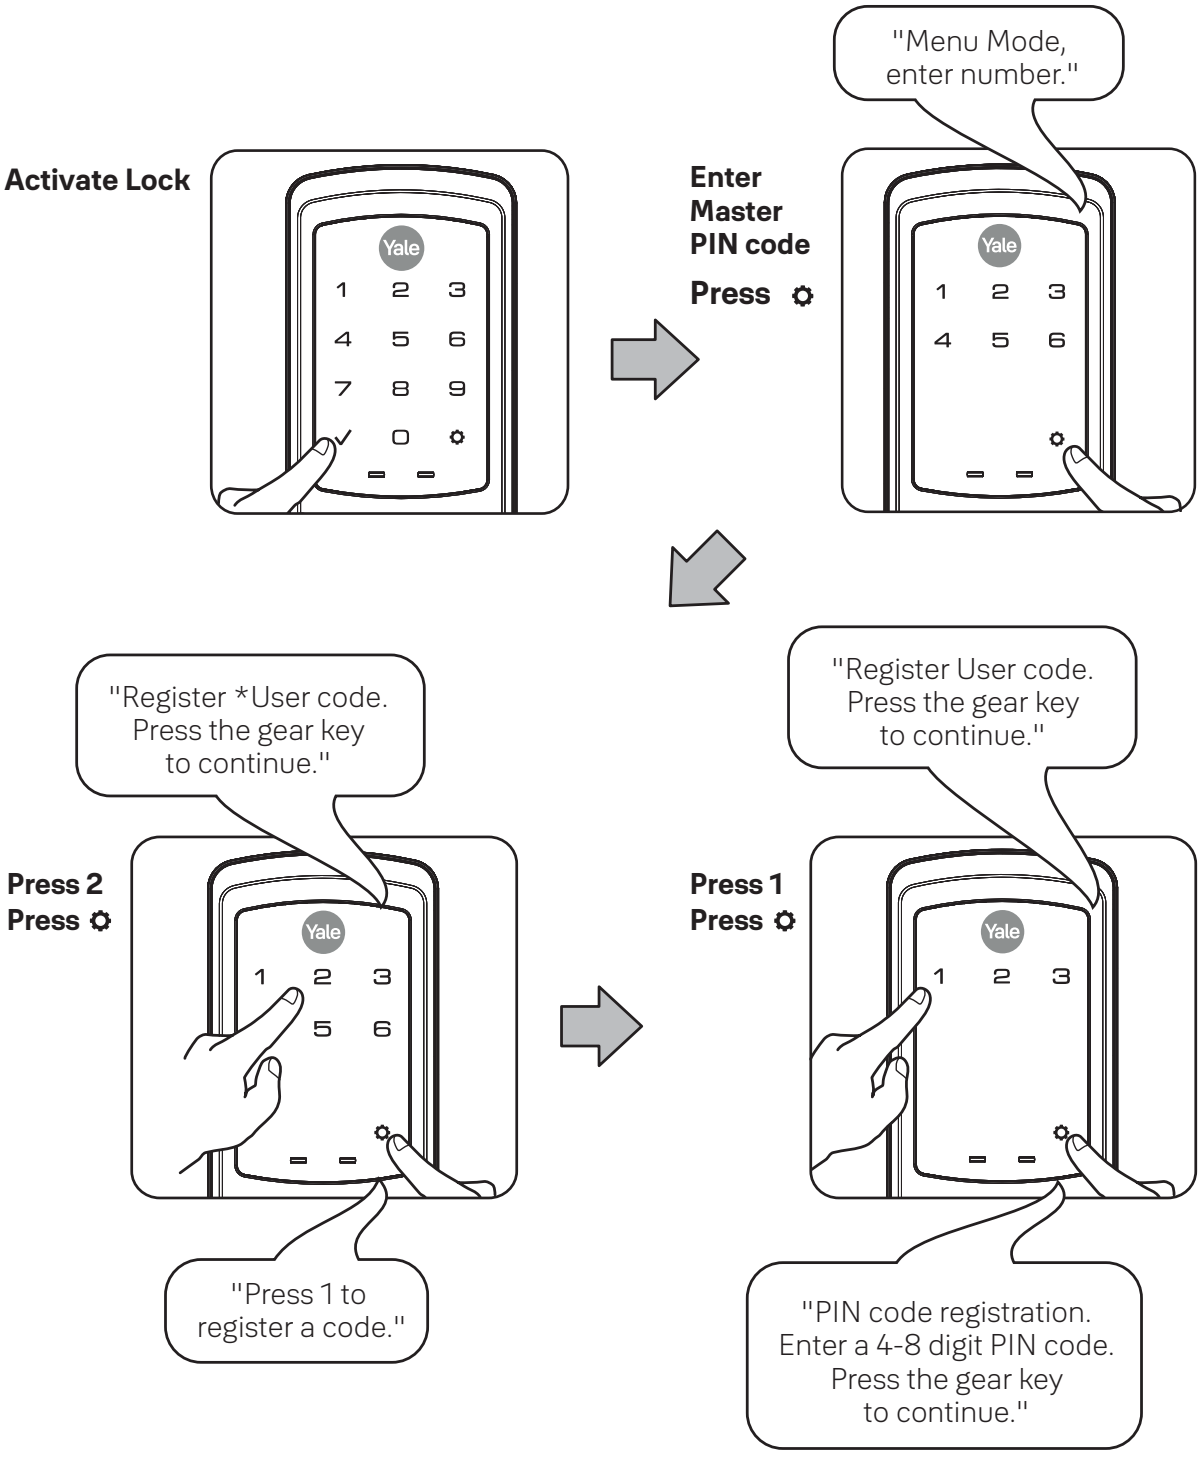

2b Creating User PIN Codes con't


Enter 4-8 digit PIN code followed by ☼

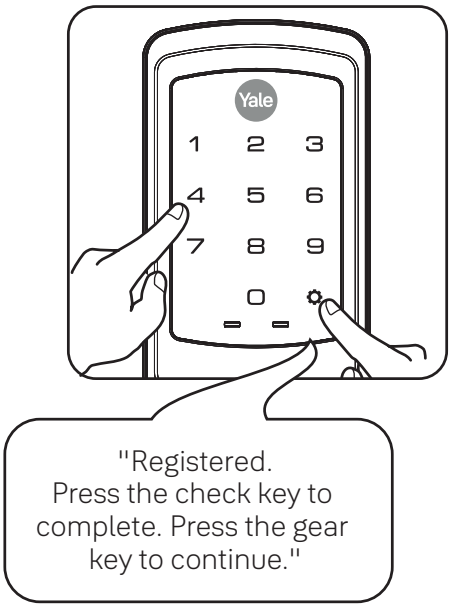

OR


Adding more User Codes:

Press ☼
Enter 4-8 digit PIN code
Press ☼

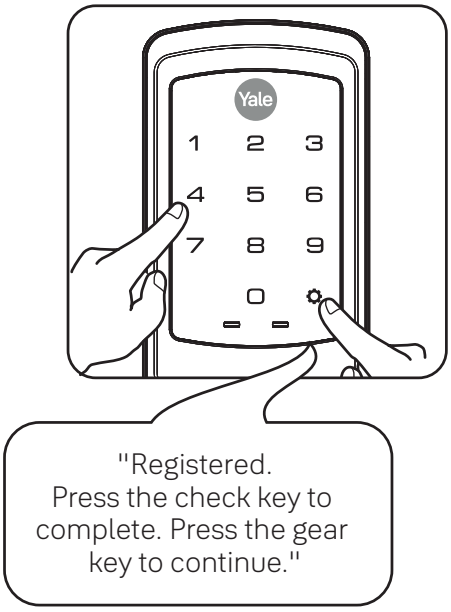

To end programming:

Press ✓

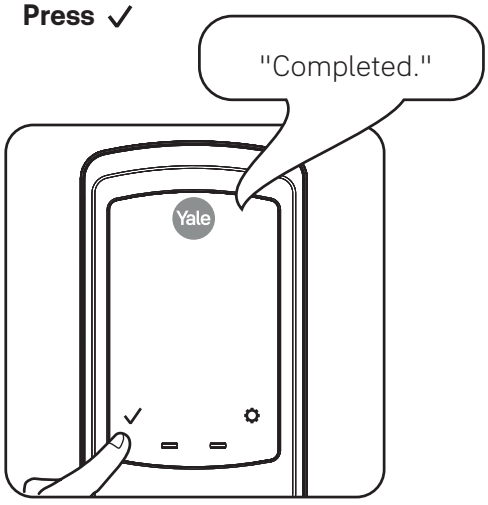


3 Locking & Unlocking Door with Registered Master or User PIN Code

The Yale Accentra Key module enables access with physical (cards and fobs) and mobile credentials ONLY. Creation and use of User PIN codes are disabled. Master PIN code is only used for programming and configuring lock with Yale Accentra Multi-Family configuration app and will not unlock door. When lock is configured into Accentra, "#2" and "#6" will no longer be visible when in "menu" mode.

With One Touch Locking Enabled:


Activate Lock

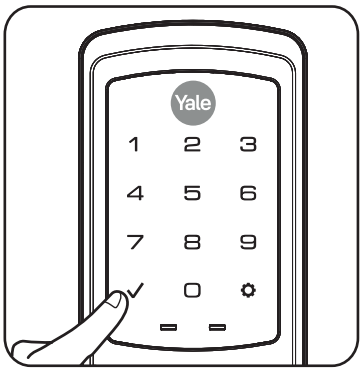


OR

Enter PIN Code

Press ✓

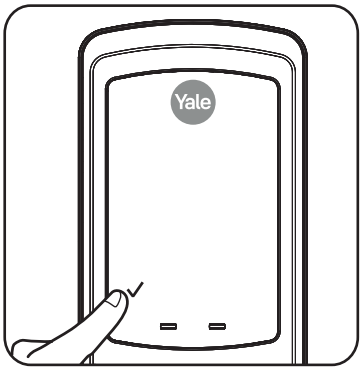


4 Locking Door with Privacy Button

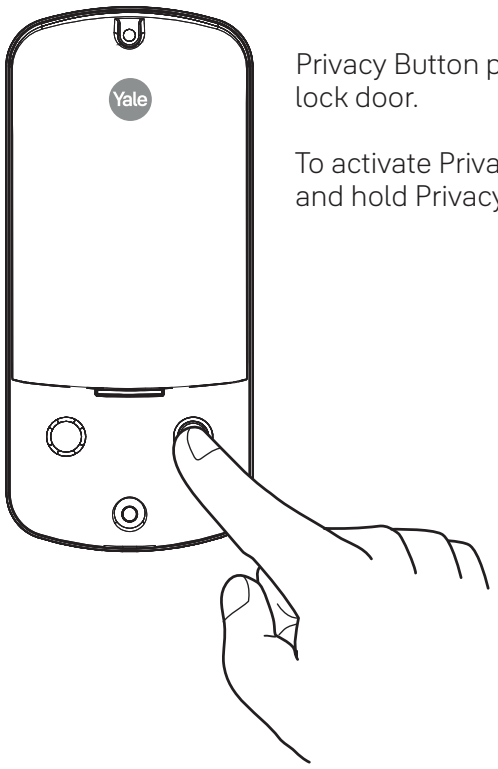

Privacy Button pressed once will lock door.

To activate Privacy Mode, press and hold Privacy Button.


Resetting Lock to Factory Default

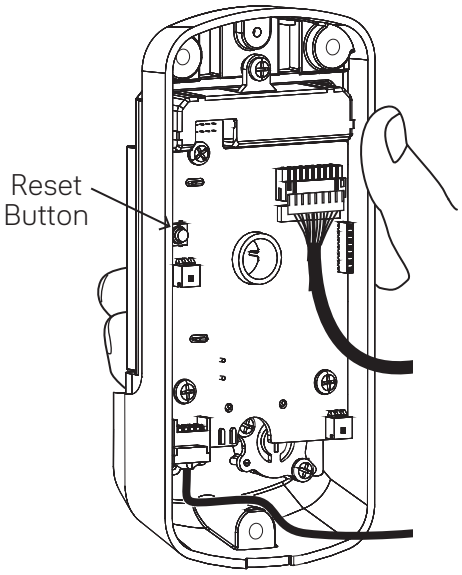

Inside Lock



Hex Wrench



#2 Philips Head
Screwdriver

When lock is reset to factory defaults all user codes (including the Master PIN code*) are deleted and all programming features are reset to original default settings (see Factory Settings).

IMPORTANT: The Reset Button is on the Inside Lock. The keypad remains assembled.

1. Remove the battery cover with supplied hex wrench and then remove batteries.
2. Remove network module if installed.
3. Using a #2 Philips head screwdriver, remove the inside lock from the door to access the reset button on back of lock. Cables may stay connected. (See illustration at above for location of the reset button.)
4. Reinstall four (4) AA batteries.
5. Press and hold the reset button for 3 seconds.
6. While continuing to press the reset button, temporarily remove one (1) AA battery.
7. Reinstall the battery.
8. Release reset button and wait approximately 15 seconds. Speaker will announce "Welcome to Yale."
9. Reassemble inside lock.
10. If utilizing a network module, remove batteries. Insert Module. Reinstall batteries.

Upon reset, Master PIN Code creation is the only option available and must be performed prior to any other programming of the lock.

Definitions

All Code Lockout Mode: This feature is enabled by the Master PIN code. When enabled, it restricts all user (except Master) PIN code access. When attempting to enter a code while unit is in Lockout, there will be an audible lock response. The touchscreen keypad will display a RED locked padlock. (Main Menu selection #6.)

Automatic Re-lock Time: After a successful unlock, the unit will re-lock automatically after 3 seconds or for a duration selected in the Advanced Lock Settings (Main Menu selection #3 then #1).

Eco Mode: When enabled, Eco Mode puts unit in low power mode extending life of battery.

Escape Return: Enabling this function allows the door to remain unlocked in the case of an emergency. Escape Return will cause the door to automatically unlock upon opening and remain unlocked even if the door swings closed. The locking action requires at least one intentional user interaction to return to the locked state. Auto Re-lock cannot be enabled when Escape Return is enabled.

Inside Indicator Light: This light will blink red when door is locked.

Language Setting Mode: Choose English (1), Spanish (2) or French (3) for the lock's voice prompts. (Main Menu selection #5.)

Low Battery: When the battery power is low, the Low Battery Warning indicator is a flashing red battery icon on the touchscreen keypad and the Yale logo will flash red on the push button keypad. If battery power is completely lost, use the 9Volt battery override. To use the 9V battery override apply 9V battery, in either direction, to terminals on the keypad for backup power option. Activate the keypad and enter your pin code to unlock the door.

Master PIN Code: The Master PIN code is used for programming and for feature settings. It must be created prior to programming the lock. The Master code will also operate (unlock/lock) the lock except when configured to Accentra system.

Network Module Setting: With the optional Network Module installed, this setting becomes available (Main Menu selection #7 or #0 with Accentra Module) and allows the lock to connect with a network controller.

One Touch Locking: When the unit is unlocked, activating the keypad will lock the unit (during Automatic Re-lock duration or when Automatic Re-lock is disabled). When One-Touch Re-lock is not in use (disabled), any valid PIN code will re-lock the lock. (Main Menu selection #3 then #3.)

Passage PIN Code: When used to unlock, lock will remain unlocked/open. Lock cannot be locked/secured until Passage code is entered again.

Privacy Button to Lock Door: A press of this button will lock the door.

Privacy Mode: All keypad functions can be disabled with a press of the Privacy Button. Privacy Mode is disabled by default. Enable Privacy Mode thru Main Menu selection #3 then #4. With Privacy Mode enabled thru Menu Mode and door closed, extend deadbolt to engage Privacy Mode. If there is no deadbolt, press and hold the privacy button until voice prompt indicates Privacy Mode is engaged. Privacy Mode duration ends when door is opened and voice prompt indicates Privacy Mode is disabled.

Shut Down Time: The unit will shut down for sixty (60) seconds and not allow operation after the wrong code entry limit (5 attempts) has been met. When the unit is in Shut down, the keypad will be flashing.

Tamper Alert: Audible alarm sounds if attempting to forcibly remove outside lock from door.

User PIN Code: The User code operates the lock. Maximum number of user codes is 500.


Volume Setting Mode: The volume setting for PIN code verification is set to HIGH (1) by default; otherwise it can be set to Low (2) or Silent (3) for quiet areas. (Main Menu selection #4.)

Wrong Code Entry Limit: After five (5) unsuccessful attempts at entering a valid PIN code, the lock will not accept a PIN code for the duration of the shut down time. The touchscreen keypad will flash, and a red lock symbol will be at the bottom of the keypad. The push button keypad will flash and the Yale icon will flash blue for the shut down period. The

Feature Programming Through Menu Mode Using Master PIN code*

1. Activate the lock.
2. Enter 4-8 digit master PIN code* followed by ✿ key. Lock Response: "Menu mode, enter number (Enter digit corresponding to the function to be performed), press the ✿ key to continue."
3. Follow the voice commands.
4. Press ✓ key to complete the process and conclude the programming session.

*The Master PIN code must be created prior to any other programming of the lock.

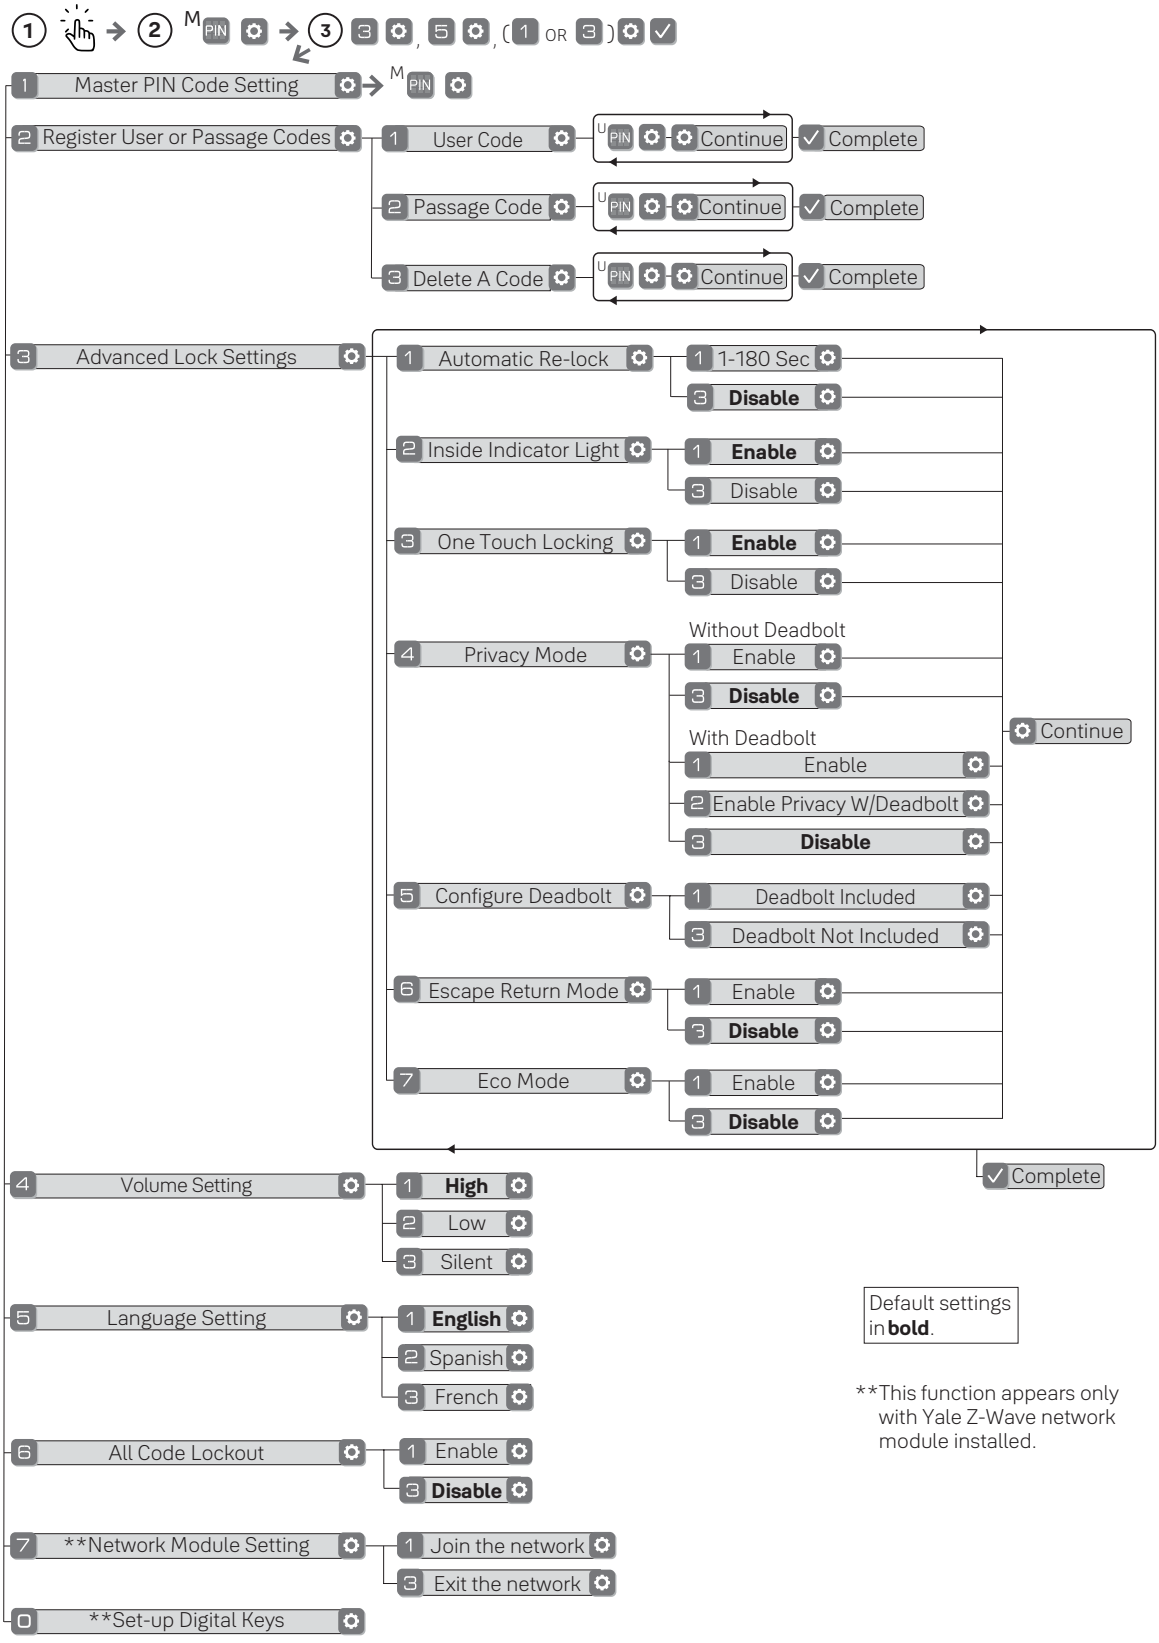

Default settings in **bold**.

**This function appears only with Yale Z-Wave network module installed.